

CASTOR G-701

First check all functions without inserted cartridges. The CASTOR G-701 operates manually and does not need neither air pressure nor electricity.

Do NOT trigger the cartridges casting gun to the complete end in empty condition (without inserted cartridges). Otherwise the mechanism will block!

■ Trigger

Pull the **Trigger (Figure 9)** constantly, let it return und pull again immediately (pump-like movement). Avoid a jerky handling. The plungers of the CASTOR G-701 move forwards in parallel motion and empty the cartridges.



Figure 9 Trigger

■ Change Cartridge

Push the **Backlatching (Figure 9.1)** in feeding direction and pull the plungers back with the **Retaining knob** at the same time

■ Maintenance and care

After use, clean the outer cover with a mild detergent (e.g. alcohol). Check the screw connections once a month to make sure they fit tightly and add some grease to the plungers from time to time.



Figure 9.1 Retaining knob

Backlatching